


Without Lower Shroud

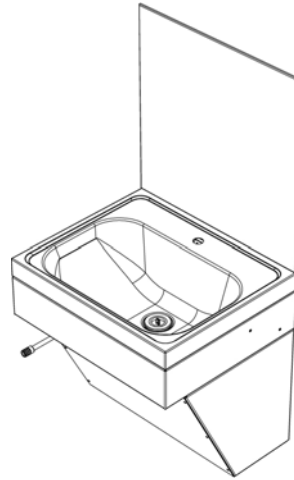

With Lower Shroud

Installation and Operation Manual For Stainless Steel Wand Operated Wash Basins

This manual is suitable for the following models:

Standard Height Models:	KNEE OPERATED WASH BASIN
SPPL.WB.H1.WM.WO1	Wand Operated – Wand Operated – Without Lower Shroud
SPPL.WB.H1.WM.WO1.300	Wand Operated – Wand Operated – Without Lower Shroud – 300mm Splashback
SPPL.WB.H1.WM.WO1.300.TV	Wand Operated – Wand Operated – Without Lower Shroud – 300mm Splashback – Tempering Valve
SPPL.WB.H1.WM.WO2	Wand Operated – Wand Operated – With Lower Shroud
SPPL.WB.H1.WM.WO2.300	Wand Operated – Wand Operated – With Lower Shroud – 300mm Splashback
SPPL.WB.H1.WM.WO2.300.TV	Wand Operated – Wand Operated – With Lower Shroud – 300mm Splashback – Tempering Valve



CONTENTS

RECOMMENDATIONS 2

RESPONSIBILITIES..... 2

REFERENCED AUSTRALIAN STANDARDS 2

INSTALLATION OF WAND OPERATED WASH BASINS 3

 Water Supply Requirements 3

 Installation of Wand Operated Wash Basins 3

SAFETY PRECAUTIONS 3

TROUBLESHOOTING 3

SPARE PARTS..... 4

WARRANTY 4

CLEANING INSTRUCTION 4

CUSTOMER ENQUIRY 4

RECOMMENDATIONS

Upon receiving a Stoddart product, inspect immediately for any visible signs of shipping damage and notify the carrier immediately. When removing the product from its packing, be careful not to dent or scratch outer surface. Any concealed damage should be noted and reported immediately to the freight carrier. A claim should be filed with carrier if appropriate.

RESPONSIBILITIES

Stoddart thoroughly inspect all products they are despatched from our factory. Stoddart Manufacturing will not accept responsibility for shipping damage.

The Plumber is responsible to ensure that the system is installed in accordance with all specific requirements of local codes and regulations (including AS 3500). If questions or complications should arise during the installation of a Stoddart product that cannot be solved using the accompanying instructions, please contact our offices or local representatives.

Note: It is the Plumbers responsibility to install this product in accordance with AS3500.

REFERENCED AUSTRALIAN STANDARDS

Markings & Labels	Watermarked components must have Watermark logo and license. Copper alloy products marked 'DR'	AS 3500.1-2003 AS 5200.000 AS 6400 – 2005
Dezincification resistance	Dezincification resistance applicable to copper alloy components in contact with mains water	AS 2345 - 2006
Contamination of water	Products For Use In Contact With Drinking Water	AS 4020 - 2005
Pipes and Fittings & Joints (i.e. Spigots, sockets, flanges, or other joint components, where interfacing other authorized components)	Dimensional compliance with relevant or corresponding Australian Standard for the pipe or fitting Pipe Threads of Whitworth Form. – Part 2 Fastening Pipe Threads	AS 3688 - 2005
Installation	Warranty / Installation instructions shall be provided by the manufacture	AS3500.2 - 2003

INSTALLATION OF WAND OPERATED WASH BASINS

Water Supply Requirements

- Stoddart wash basins are fitted with a 40mm waste
- Water supply connection for the valve must be 15mm diameter.
- Hot and cold supplies are required for units with a tempering valve.
- Min. flow pressure 200 kPa.
- Max. flow pressure* 500 kPa
- Max. static pressure 800 kPa
- WELS rating 4-5 STAR depending on model

* Refers to the minimum connection pipe size to any valve branched off the ring main pipe providing that the above required technical specifications can be met. Pipe work to the valve fixture must be sized to and installed to water service rules and regulations (AS/NZS 3500.1 and local regulations) and simultaneous demand requirements. To ensure proper sizing of the pipe work for the valve it is recommended to engage a qualified hydraulic designer.

Installation of Wand Operated Wash Basins

Stoddart basins are supplied with mounting holes pre-punched for easy installation.

- Remove the packing from the wash basin and check for damage.
- Remove access panel.
- Unscrew the screws on either side of the basin to remove the removable galvanised bracket from the basin.
- Place the bracket at desired height and mark the locations of screw holes and/or outline around the bracket if adhesive is being used, making sure bracket is level.
- Ensure the water supply and waste are in the zone marked in the image to the right, and the waste is approximately 227mm below basin top (673 mm above FFL for 900mm basin height).
- Attach bolts with sufficient load bearing fixings to the wall.
- Fix the removable bracket to the bolts.
- Slide the wash basin on to the bracket.
- Fasten lower shroud to wall.
- Connect the plumbing and test for leaks.
- Replace access panel. Apply sealant around the junction between the basin and the wall.
- Clean stainless steel surfaces.

Note: Protect the product at all times by wrapping in plastic until all other work is complete and the system ready to be put into operation.

SAFETY PRECAUTIONS

For the installation and operation observe all relevant electrical, safety plumbing and building standards.
All supplied components should only be used for the purpose they are designed for.

TROUBLESHOOTING

Unit will not stop water flow, or leaks from outlet.

- Check to see if a line strainer is installed.
- If a line strainer is not installed then check for dirt and grit and clean valve and plumbed connections.
- If above checked out o.k. contact service.

Cannot Find the Bracket

- Locate galvanised steel bracket on rear. Locate screws on either side and unscrew bracket from body.



SPARE PARTS

<i>Article No</i>	<i>Description</i>
CMPL-0255	Waste and Plug
CMPL-0462	Wand Operated Valve
CMPL-0511	Caleffi Tempering Valve
CMPL-0562	Hand Basin Polished

WARRANTY

Upon receiving a Stoddart product, inspect immediately for any visible signs of shipping damage and notify the carrier immediately. When removing the product from its packing, be careful not to dent or scratch outer surface. Any concealed damage should be noted and reported immediately to the freight carrier. A claim should be filed with carrier promptly if appropriate. Stoddart Manufacturing will not accept responsibility for shipping damage.

The Standard Terms and Conditions of Sale clearly details Standard Warranty Policy. Plumbing Products offer additional conditions as follows;

- Warranty on materials and labour is limited to 12 months from date of installation.
- The Warranty does not cover damage caused by abuse, misuse or improper application or improper installation.
- Warranty Claims must be submitted in writing to Stoddart Manufacturing within 14 days of observation of fault.
- Items may be returned to Stoddart's Factory by the Customer for warranty inspection. For valid warranty claims, Stoddart will repair or replacement the item and return it to the Customer promptly.
- For installed products, Photos must accompany the Warranty Claim for effective consideration.
- If a site visit is required to conduct warranty repairs, such work will be carried out during normal business hours e.g. 8am to 5pm. Mon to Fri.

CLEANING INSTRUCTION

All surfaces of the product should be cleaned with mild soap and water or a neutral product. Carefully rinse away all surplus cleaning product.

IMPORTANT: Never use harsh or abrasive cleaners on stainless steel. Do not use chlorinated or bleach water

CUSTOMER ENQUIRY

All customer complaints enquiries Stoddart Stainless Steel Toilets should be referred to:

Customer Service Department
Stoddart Manufacturing
149 Jackson Road 4109
Sunnybank Brisbane
Ph +61 7 33455011
Fax +61 7 33441000
Email: plumbing@stoddart.com.au
Web : www.stoddart.com.au